



MAINTENANCE MENU

2003 Sequoia
4-Wheel-Drive
8-Cylinder
Non-Turbo-Charged
32000 km

PREVIOUS MAINTENANCE

24000 KM Oil & Filter Service

An Oil & Filter Service is required every 6 months/8,000 km, whichever occurs first. Every Oil & Filter Service includes the following operations: Replace engine oil & filter Remove & inspect air filter element Lubricate locks, latches & hinges Confirm lights, horn & wipers function properly Check coolant, brake & washer fluid levels Check tires and adjust pressure as required.

NEXT MAINTENANCE

32000 KM Maintenance Service

Replace engine oil and filter. Remove and inspect air filter element. Lubricate locks, latches and hinges. Confirm lights, horn and wipers function properly. Check coolant, brake and washer fluid levels. Inspect drive belts for damage, adjust belt tension if required. Check steering gear box, linkage and shock absorbers for looseness, damage or leakage. Inspect ball joints and dust covers, driveshaft and steering rack boots, chassis nuts and bolts for looseness or damage. Remove wheel and brake drum, check pad/shoe thickness. Examine brake calipers, wheel cylinders and brake lines for proper function, leaks or damage. Adjust rear brakes as required. Inspect exhaust system for leaks or damage. Rotate tires*, examine for damage and wear, check and adjust pressure, includes spare. Road test. *Tires may require more frequent rotation depending on alignment, driving habits and road conditions.

Replace Front Differential Fluid

Replace Transfer Case Fluid

Replace Engine Coolant

Inspect fuel lines and connections

Inspect fuel lines and connections, fuel tank vapour vent system hoses,

[◀ S](#)[◀ P](#)[C](#)[E](#)[P](#)[◀ O](#)[P](#)[◀ &](#)[P](#)[LEG
AND](#)

fuel tank bands and fuel tank cap gasket.

Replace Rear Differential Fluid (Synthetic)

Lubricate Propeller Shaft

FUTURE MAINTENANCE

40000 KM

Oil & Filter Service

An Oil & Filter Service is required every 6 months/8,000 km, whichever occurs first. Every Oil & Filter Service includes the following operations:
Replace engine oil & filter Remove & inspect air filter element Lubricate locks, latches & hinges Confirm lights, horn & wipers function properly Check coolant, brake & washer fluid levels Check tires and adjust pressure as required.